


# **SANITARY PUMP SOLUTIONS**

PART OF THE EXPERT SERIES LINE OF AIR OPERATED DIAPHRAGM PUMPS



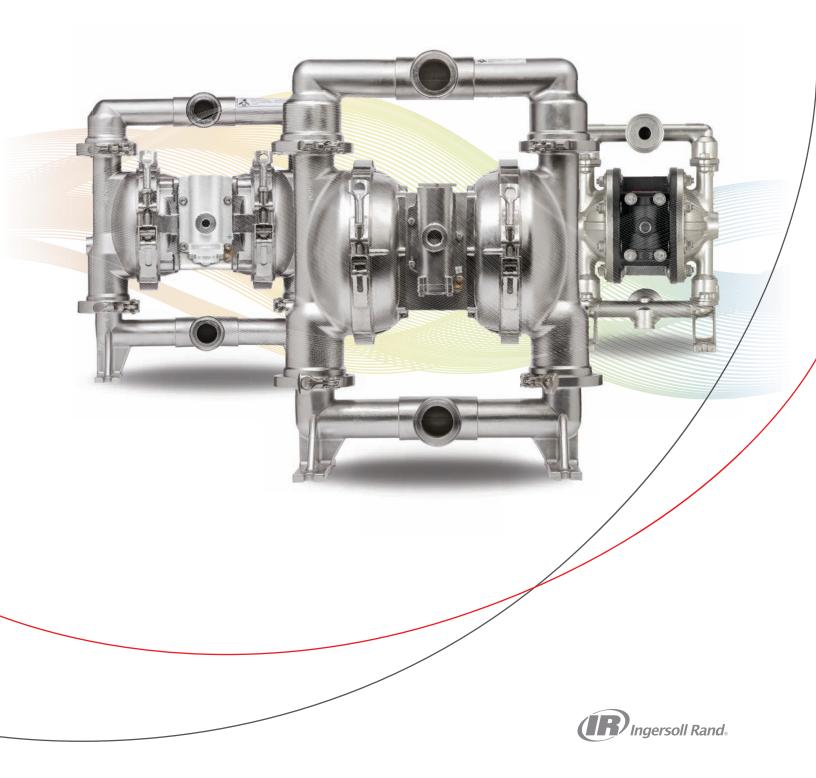

# Explore our family of FDA & CE 1935/2004 Compliant solutions from our Expert Series line Of diaphragm pumps.



Optional polypropylene center body shown



ARO<sup>®</sup> is a worldwide manufacturer of fluid management products that are skillfully engineered to deliver performance and serviceability, allowing success to flow freely in our customers' businesses. That's why ARO<sup>®</sup> is fluid intelligence—the smart choice in fluid management products for industrial operations. With over an 85-year legacy of premier product performance and service excellence, ARO<sup>®</sup> provides fluid management equipment for customers and industries around the globe.

ARO's sanitary pumps, a part of our Expert Series (EXP) line, are designed to transfer fluid for the food and beverage industries efficiently and safely. Our pumps typically yield 20 to 30 percent better flow rates than other products available on the market, ensuring the material is transferred carefully. Since every ounce of fluid is treated gently, the shelf life is often extended and product quality maintained.

# All ARO<sup>®</sup> EXP pumps feature:

- Patented "Unstallable" unbalanced air valve design which avoids stalling issues associated with other pumps.
- Exhaust valves that divert cold exhaust air from ice-prone components, which prevents freezing and downtime.
- Ability to pass even large shear-sensitive solids without degradation or heat build-up.
- The ability to run dry (eliminating the risk of pump damage).
- Gentle pumping action will not froth or separate fluid, improving end-product quality.

# Markets and Applications

ARO<sup>®</sup> sanitary diaphragm pumps deliver safety and quality, as well as industry leading total cost of ownership. By combining the rugged reliability of our EXP pump design with the capacity to handle high volume transfer and dispensing applications, ARO<sup>®</sup> pumps enable you to produce more for your customers.

**Certification:** ARO<sup>®</sup> sanitary pumps are engineered to the meet the highest standards and requirements in the industry including: CE, ATEX, 1935/2004/EC and FDA CFR 21.177

Food

CE







Pharmaceutical



Cosmetics

CFR 21.1



# Our SD line features the Quick Knock Down (QKD) compression clamp system to facilitate easier cleaning, service, and maintenance.

## EXPert Series (EXP) pump design

Industry leading total cost of operation, better flow rates and higher reliability

 As an expansion of the EXP Series of dual diaphragm pumps, ARO<sup>®</sup> now offers plant managers and maintenance engineers a reliable choice for sanitary applications.

## Compression clamp band design

Faster cleaning, service, and maintenance

 Quick knock down (QKD) design facilitates rapid disassembly (and re-assembly) of components for inspection and maintenance in place or out of place—and right back into service.

## Center bodies available in stainless steel or Polypropylene

- Stainless center bodies: Provide durable/reliable construction compliant with ATEX environments.
- Polypropylene Center Bodies: Lighter and chemically compatible for the most caustic environments.

## Flow-rate optimized

Better overall performance, low material shear

- ARO<sup>®</sup> EXP Series design yields 20-30% better flow rate than competitors and ensures the material is transferred unharmed.

# Electropolish stainless-steel 316L construction

Sanitary grade and high temperature capability

 FDA and CE 1935/2004 compliant materials help ensure product purity and easy clean out. Exclusive 316L ball valve permits higher temperature operation.

# Electronic control and monitoring capability

Electronic interface quickly integrates with PC or PLC systems, or the ARO Controller helping to reduce waste and increase productivity

# Single piece composite PTFE diaphragms

Minimizes the number of collection points for fluid being pumped

- Speeds disassembly, cleaning and reassembly



# SD Series Diaphragm Pumps

Our factory-installed options let you customize your ARO<sup>®</sup> Sanitary pump to your specific application needs for costeffective, factory control and worry-free integration. Quick knock down (QKD) design allows for quick inspection and maintenance—and then right back into service.

Additional technical information can found at AROzone.com or contact technical support at arotechsupport@irco.com ARO<sup>®</sup> can be consulted upon request for custom sanitary powder pump applications





Operating Data	SD10X-CSS-SXX-B 1" Pump	SD20X-CSS-SXX-B 2" Pump
Startup Pressure (bar)	1.723	1.723
Dry suction lift ft. H20 (m)	5.02	5.56
Wet suction lift ft. H20 (m)	9.57	9.57
Flow Rate (L/m)	204.4	738
Displacement per/cycle @ 6,9 bar (liters)	0.976	4.9
Max. Solids Passage (mm)	3.175	6.35
Fluid Inlet/Outlet	1-1/2" Tri-Clamp	2-1/2" Tri-Clamp

#### Service Kits for SD Series Pumps

	SD10S Stainless Steel Center	SD10R Polypropylene Center	SD20S Stainless Steel Center	SD20R Polypropylene Center
Fluid Kit	63749	93-XX	63749	94-XX
Air Section Kit	637	495	637497	637497-1
Valve Block Kit	637496	637496-1	637498	637498-1

#### **SD Series Pumps Ordering**

Position	1	2		3	4	5		6	7	8			9	10
Example:	SDXX	X	-	С	S	S	-	X	X	X	-	В	X	X
1- Port Size	3.	- Conn	ection		6- Sea	at Mate	rial	7- E	Ball Ma	erial	8	- Diap	hragm M	aterial
SD10 1" Port			Compressi	on	С	Hytrel		С	Hyt	el		C	Hytrel	
SD20 2" Port			Clamp ed Parts		К	PVDF		М		lical Grad	e	M	Medical Gr Santoprene	
2- Center Section Material	1				S	316L S	S	S	316	L SS			PTFE/Sant	oprene
S 316 SS R White Polypropyle		- Clam	316L SS <b>ps/Hard</b> 304 SS	lware				T	PTF	E		к _	PTFE Com	oosite
9- Specialty Co	de 1 (blank	c if no s	pecialty c	ode)	10	- Specia	alty Cod	<b>e 2</b> (bla	nk if no	specialty	/ code)			
A - Solenoid 120VAC B - Solenoid 12VDC C - Solenoid 240VAC	F - 24vDC N G - Solenoid H - Solenoid	12VDC	ATEX/IE		F - E G - E	nd of Stro	oke Feedb oke Feedb ke Feedback	ack k ATEX/IE	Cex/ NEC	/CEC	NEC/CEC			

# PM Series Diaphragm Pumps

Our PM Series of diaphragm pumps are also constructed of electro-polished 316 stainless steel fluid section but feature bolted construction with all stainless steel hardware.

Additional technical information can found at AROzone.com or contact technical support at arotechsupport@irco.com











Operating Data	PM05X 1/2" Pump	PM10X 1″ Pump	PM15X 1-1/2" Pump	PM20X 2" Pump	PM30X 3" Pump
Flow Rate GPM (lpm)	12.0 (45.4)	52.2 (197.6)	123 (465.6)	172 (651)	275 (1041)
Displacement per Cycle GAL (liters)	0.040 (0.15)	0.232 (0.88)	0.617 (2.34)	1.4 (5.3)	2.8 (10.6)
Air Inlet (Female)	1/4 - 18 N.P.T.	1/4 - 18 N.P.T.	1/2 - 14 N.P.T.	3/4 - 14 N.P.T.F1	3/4 - 14 N.P.T.
Fluid Inlet / Outlet	1-1/2" Quick Disconnect Connections	1-1/2" Quick Disconnect Connections	2" Quick Disconnect Connections	2-1/2" Quick Disconnect Connections	3" Quick Disconnect Connections
Max. Operating Pressure PSI (bar)	100 (6.9)	120 (8.3)	120 (8.3)	120 (8.3)	120 (8.3)

## Service Kits for PM Series Pumps

	PM05 1/2" Pump	PM10 1" Pump	PM15 1-1/2" Pump	PM20 2" Pump	PM30 3" Pump
Fluid Kit	637427-XX	637401-XX	637375-XX	637309-XX	637303-XX
Air Kit	637428	637397	637389	637421	637421

### **PM Series Pumps Ordering**

PM30

Α

S

Position	1	2		3	4	5		6	7	8		9
Example:	PMXX	X	-	С	S	S	-	X	X	X	-	X02

1- Series/Port Size

2- Center Section

Aluminum Polypropylene

Stainless Steel

Material

M05	1/2" Port
М10	1" Port
M15	1-1/2" Port
M20	2" Port
М30	3" Port

## **3- Connection**

Clamp

Stainless

Stainless

Steel

Steel

5- Hardware

4- Wetted Parts

C

S

Compression

	6-	Seat N
--	----	--------

Sea	at Material	
<u> </u>	Santoprene	

Stainless Steel

Santoprene

7- Ball Material

PTFE

A02	1", 1-1/2" Ported Pumps
В02	1/2", 2" Ported Pumps

#### 3" Ported C02 Pumps

#### 8- Diaphragm Material

1	Santoprene
	Medical Grade Santoprene
	/

n Material	
ene	
Grade	

Santoprene	
PTFE/	

PTFE/
Santoprene

# Case Study:

Create Smooth Brews with ARO<sup>®</sup> FDA Compliant Diaphragm Pumps

The Pacific Northwest is the birthplace of the American craft brewing movement. Regional craft breweries produce between 15,000 and 6 million barrels of beer per year. These breweries are unique because they take the time to create handcrafted brews with high-quality ingredients.



In 2012, Justin Brandt founded Northwest Canning, a mobile canning operation based in Portland, Oregon, that provides packaging solutions for microbreweries and regional craft breweries throughout Oregon, Washington, and Idaho. Since its inception, Northwest Canning has experienced explosive growth, and recently switched from an electricpowered centrifugal pump to the new ARO<sup>®</sup> FDA compliant air operated diaphragm pump. As a result, Brandt estimates that on average they are experiencing a 10 to 15 percent increase in production capacity. "We had evaluated other diaphragm pumps, but they were inefficient and the air requirements were too high for some breweries," said Brandt.

## Pump selection is key to maintaining the quality of beer, and speed to market

Northwest Canning used to use an electric-powered centrifugal pump mounted in its mobile canning trailer. The centrifugal pump provided a significant increase in power, but required operation on a continuous cycle. The pump used an impeller to suck the beer in and then dispense it into the filler. If the operation had to be stopped, the impeller would continue to spin, foaming up the beer in the filler and increasing the liquid's temperature. The constant pumping of the beer introduced more oxygen into the beer, causing foam, and ultimately killing the flavor.

In early 2015, Northwest Canning replaced the centrifugal pump with an FDA compliant air operated diaphragm pump from ARO<sup>®</sup>. ARO's FDA-compliant SD pumps are designed to transfer fluid for the food and beverage industries efficiently and safely. These pumps typically yield 20 to 30 percent better flow rates than other products available on the market, ensuring the material is



transferred carefully – a high priority for brewers and canners. Since every ounce of beer is treated gently, the shelf life is extended while maintaining the carefully crafted flavor of each brew. "A gentle canning process extends the shelf life of the canned beer while maintaining flavor quality – that makes my clients happy," Brandt said. With the centrifugal pump, Northwest Canning filled 100 to 120 cases an hour. Using the ARO pump, they now fill 160 cases an hour. According to Brandt, "with the ARO® FDA-compliant pump, Northwest Canning is now the fastest mobile cannery on the road." Learn more about the ARO® FDA-compliant pump at AROzone.com/FDA



Exactly built and designed by ARO<sup>®</sup>, Authentic ARO<sup>®</sup> Parts are the replacement parts you can count on to restore your ARO<sup>®</sup> equipment to the equipment's original performance and quality, while backing up your warranty.

Though a part may look like an ARO<sup>®</sup> part, unless the part carries the Authentic ARO<sup>®</sup> Parts name and was bought from one of our authorized distributors, the part does not carry the ARO<sup>®</sup> promise and runs the risk of subpar chemical, metallurgical, and mechanical properties. Don't risk the downtime. Use Authentic ARO<sup>®</sup> Parts every time.

Contact us today with any of your fluid needs.

Distributed by:

www.AROzone.com

fluid\_management\_emea@irco.com

youtube.com/aropumps

# **ARO**<sup>°</sup>

ARO<sup>®</sup> is a brand of Ingersoll Rand. Ingersoll Rand (NYSE:IR) advances the quality of life by creating comfortable, sustainable and efficient environments. Our people and our family of brands—including Club Car<sup>®</sup>, Ingersoll Rand<sup>®</sup>, Thermo King<sup>®</sup> and Trane<sup>®</sup>—work together to enhance the quality and comfort of air in homes and buildings; transport and protect food and perishables; and increase industrial productivity and efficiency. We are a \$13 billion global business committed to a world of sustainable progress and enduring results. For more information, visit www.ingersollrand.com.

We are committed to using environmentally conscious print practices